

Fuser

WARNING!

The fuser is very hot. After turning the printer power off, allow the fuser to cool for at least 30 minutes before removing it.

1. Remove the rear output bin. See ["Rear output bin" on page 155](#).
2. Squeeze the blue fuser release tabs (callout 1).

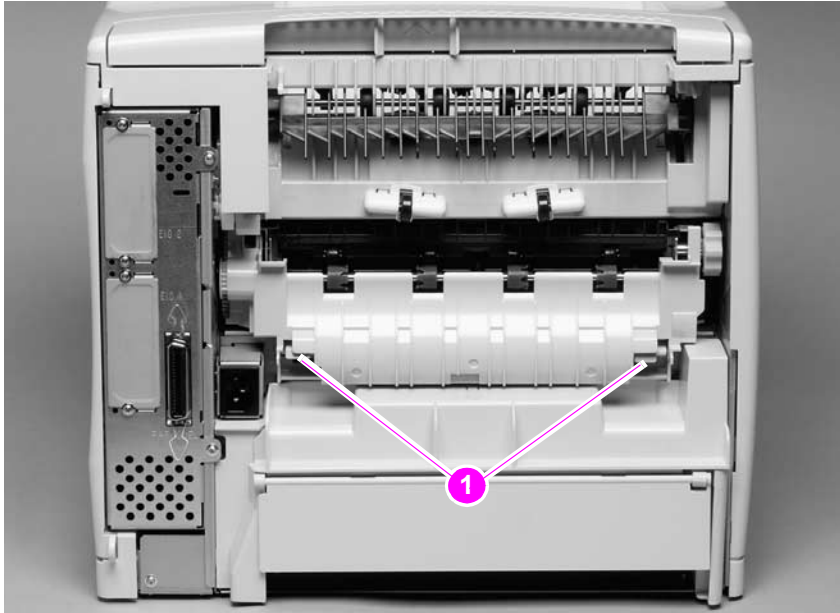


Figure 100.

Fuser (1 of 2)

3. Pull the fuser straight back and out of the printer.

CAUTION

Do not drop or jar the fuser. It can easily be damaged if it is mishandled.

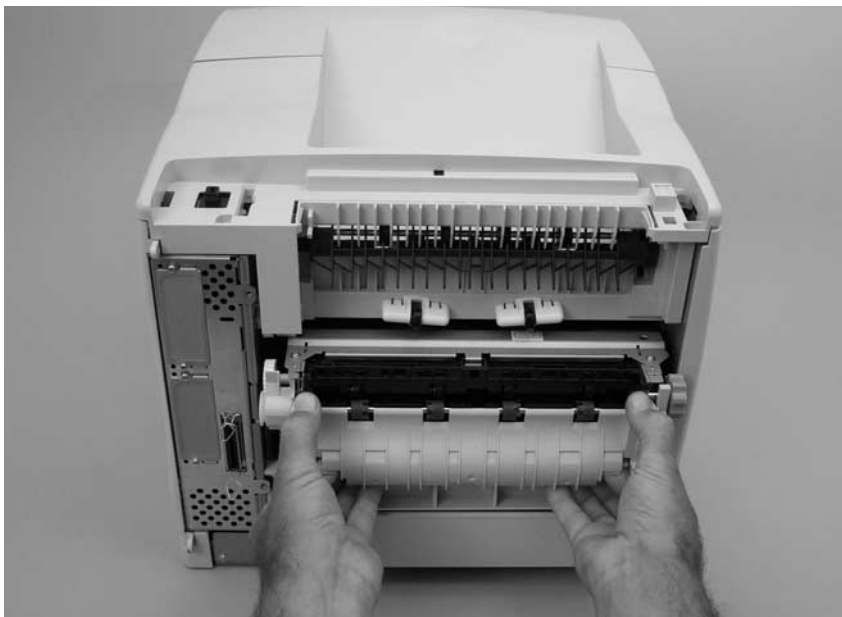


Figure 101.

Fuser (2 of 2)

Hint

When you replace the fuser, make sure that it is fully seated into the printer. You should hear both sides snap into place.